



Dave Yost • Auditor of State

TO: UAN Users
FROM: UAN Support
DATE: July 22, 2014
SUBJECT: Tray Reset Instructions for UAN Dell Printers

This document details each step to reset your UAN Dell Printer to the preferred UAN settings. Please make sure to follow the correct set of instructions for your Printer.

DELL 2335DN Multifunction

All Steps will be on the Printer's LCD screen

- Go to Setup, then Press the Check Button
- On Paper Setup, Press the Check Button
- On Tray 1, Press the Check Button
- On Paper Size, then Press the Check Button
- Choose Legal, then Press the Check Button
- Press the Back Button twice
- Choose Tray 2, then Press the Check Button
- On Paper Size, then Press the Check Button
- Choose Letter, then Press the Check Button
- Press the Back Button twice to return to the main menu.

DELL 2350DN Single Function

All Steps will be on the Printer's LCD screen

- Press the Menu Button
- On Paper Menu, Press the Check Button
- On Default Source, Press the Check Button
- Press the Right Button once to Tray 2, then Press the Check Button
- Press the Right Button once to Paper/Size Type, Press the Check Button
- On Tray 1, Press the Check Button
- On Size, Press the Check Button
- Press the Right Button once to Legal, then Press the Check Button
- Press the Back Button once
- Press the Right Button once to Tray 2, then Press the Check Button
- On Size, Press the Check Button
- Choose Letter, then Press the Check Button
- Press the Back Button three times to return to the Printer's main menu.

88 E. Broad St. Columbus, OH 43215
Telephone: (800)833-8261 Fax: (877)727-0088
Email: UAN_Support@ohioauditor.gov

DELL 2360DN Single Function

All Steps will be on the Printer's LCD screen

- Press the Tools Button
- On Paper Menu, Press the OK Button
- On Default Source, Press the OK Button
- Press the Right Button once to Tray 2, then Press the OK Button
- Press the Right Button once to Paper/Size Type, Press the OK Button
- On Tray 1 Size, Press OK
- Press the Right Button once to Legal, then Press the OK Button
- Press the Right Button twice to Tray 2 Size, then Press the OK Button
- On Letter, Press the OK Button
- Press the Back Button three times to return to the Printer's main menu.